
LEDPRO

Dimensions & construction

Maatvoering en opbouw | Aluminium 6063 | 29 x 62 mm



Dimension: mm

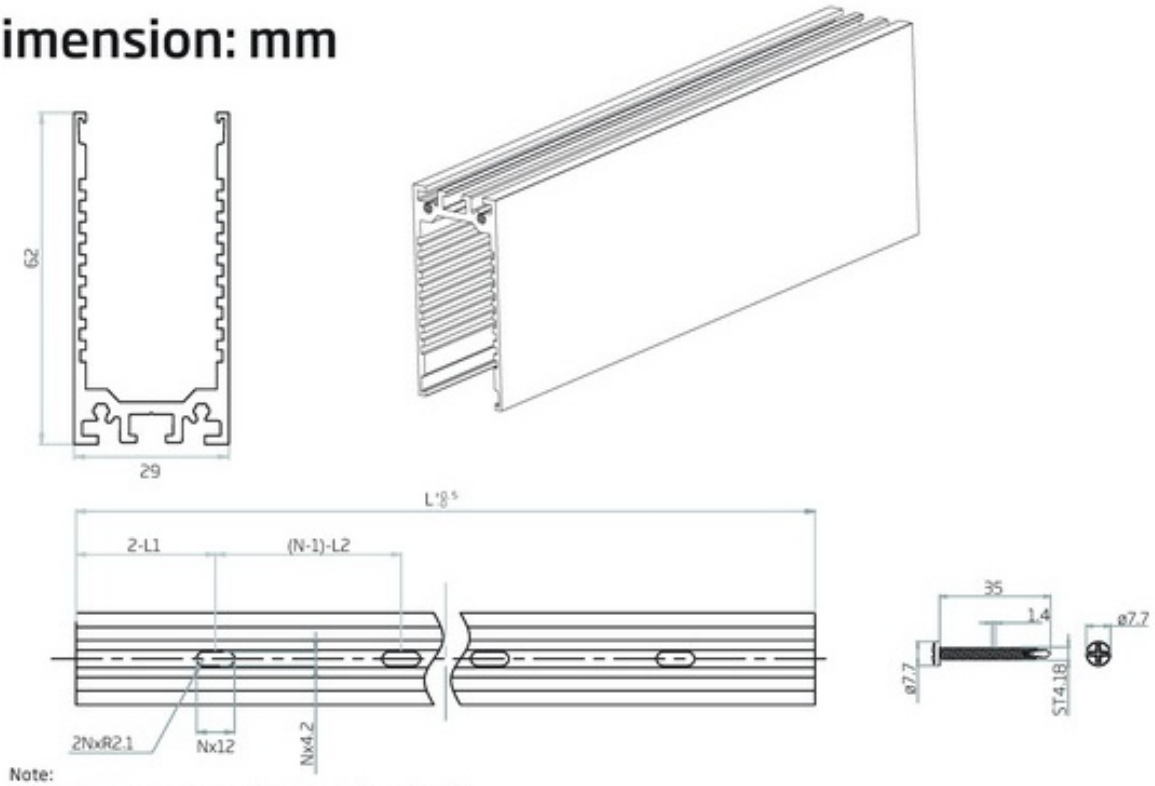

Note:
1. 2-L1 refers to two of symmetric L1 in each piece of profile.
2. (N-1)-L2 refers to (N minus one) of symmetric L2 in each piece of profile.
N hereby stands for its corresponding Hole Number in the below table


Item Code	Standard Length	L1	L2	Slotted Hole	Hole Number
S4-SMR/PL-500MM-AL	500mm/19.68in	50mm/1.97in	200mm/7.87in	4.5*12mm/0.18*0.47in	3
S4-SMR/PL-1000MM-AL	1000mm/39.37in	100mm/3.94in	200mm/7.87in	4.5*12mm/0.18*0.47in	5
S4-SMR/PL-2000MM-AL	2000mm/78.74in	100mm/3.94in	200mm/7.87in	4.5*12mm/0.18*0.47in	10

LEDPRO


Components & cable space

Onderdelen en kabelruimte | Maximaal 570 mm2

Main Components

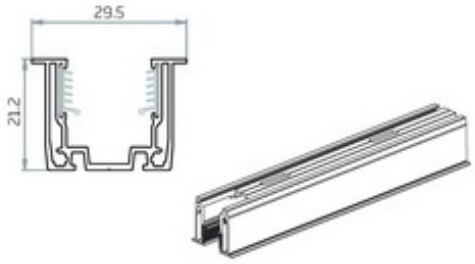Outer Aluminum Profile		Inner Aluminum Profile	
			
Retaining Bracket for Inner and Outer Profiles	Joining Bracket for Outer Profiles	End Cover	End Cover with Cable Hole
			

Exploded View

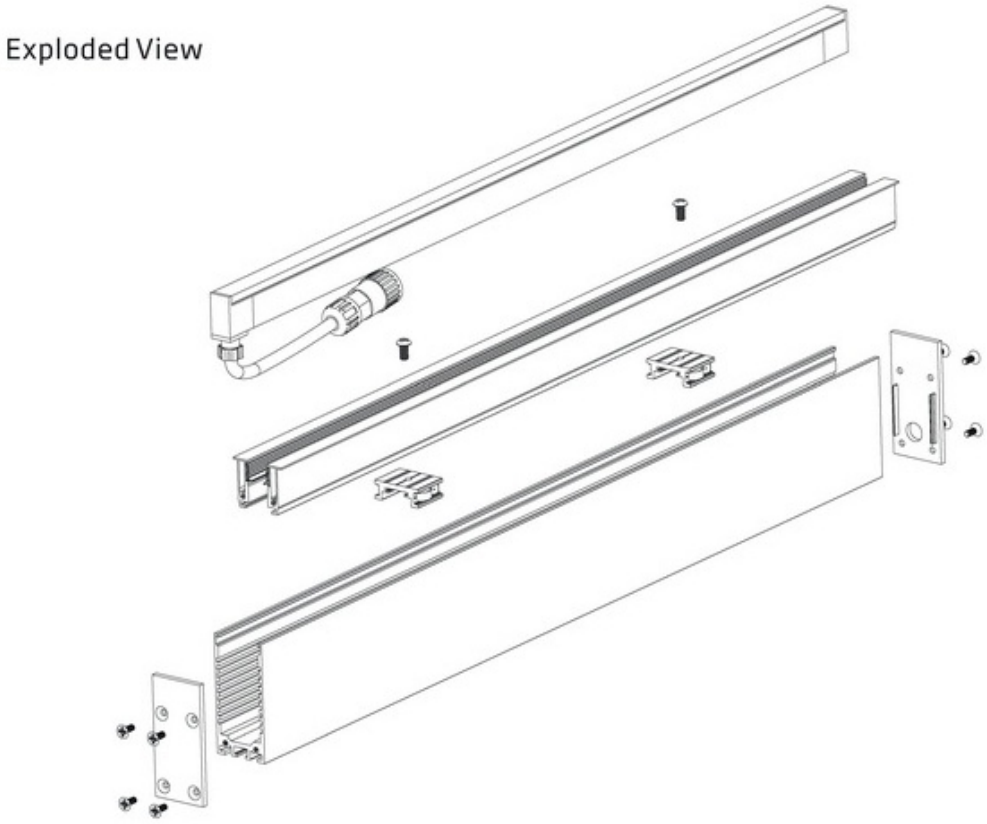


Installation / Montage - 1/2

Direct fixing through the profile base / Bevestiging via de profielbodem

Installation Instructions


Friendly Reminder: please read instructions carefully before operation.

Step 1

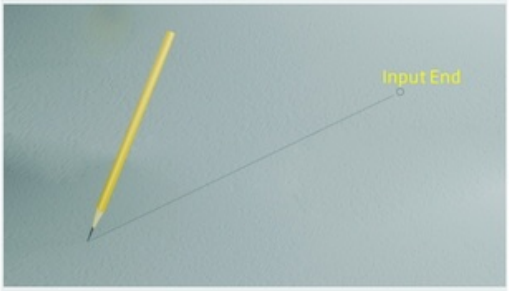


Mark the mounting position and input end.

Step 2

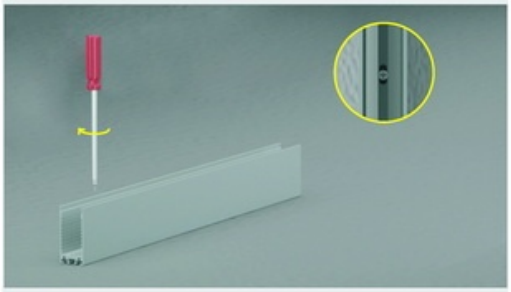


Fix the outer aluminum profile.

Step 3

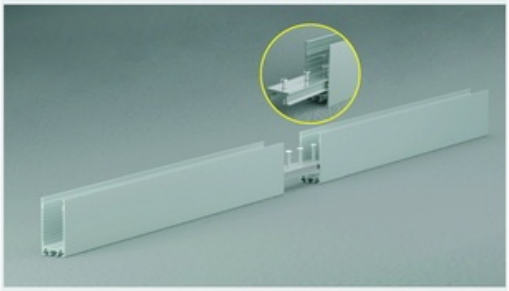


If needed, insert the joining bracket into the bottom slot of outer profiles and centered for the length extension.

Step 4

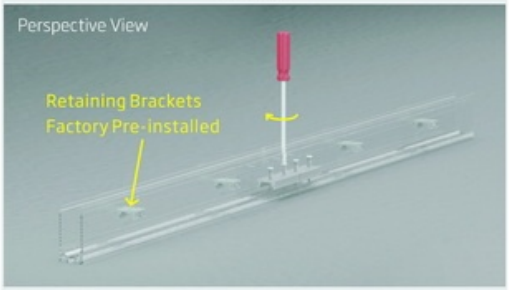


Tighten the screws towards the bottom of outer aluminum profile until locked.

Step 5

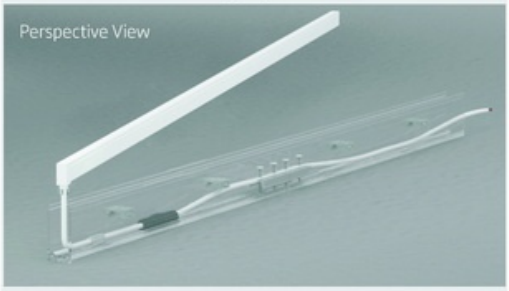

Wiring under the retaining bracket and over the joining bracket .

Step 6

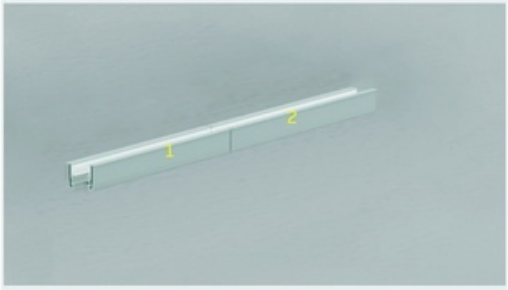


Cut one piece of inner aluminum profile evenly into two segments named 1 & 2 separately.

Installation / Montage - 2/2

Direct fixing through the profile base / Bevestiging via de profielbodem


Installation Instructions

Step 7

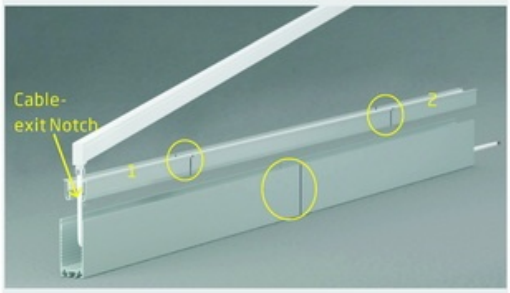


Put inner aluminum profiles inside in the rearranged sequence to keep a staggered installation with outer profiles and be aware of the notch direction prior to it.

Step 8

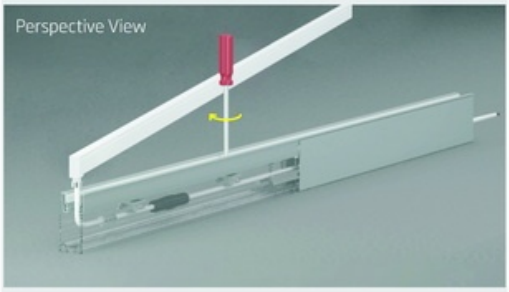


Tighten the screws through retaining bracket to lock the inner aluminum profile.

Step 9

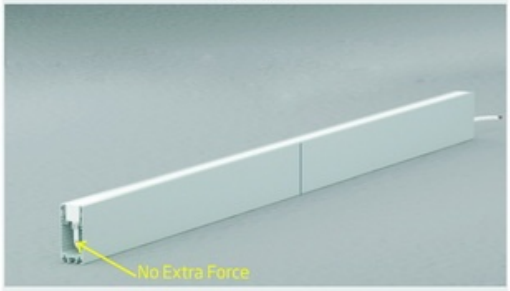


Fit in the light by palm orderly and tidy the excess cable gently.

Step 10

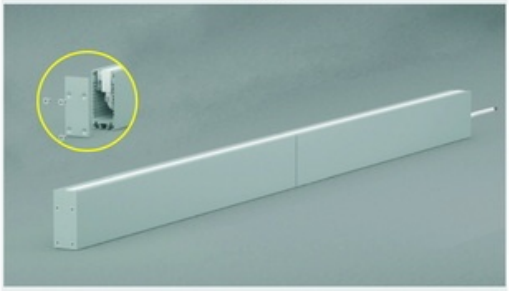

Seal the front connector by the end cover without cable hole and tighten the screws.

Step 11

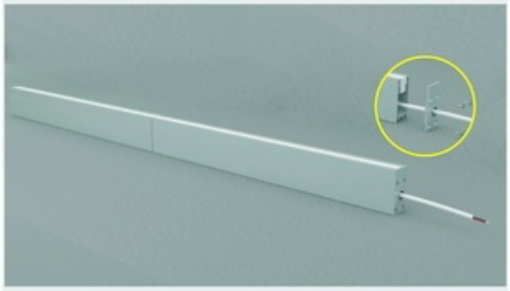


Threading the cable through the hole and seal the other end likewise.

LEDPRO

Side mounting bracket - SM/B

Zijmontagebeugel | 70 x 25 x 20 mm

SM/B | Side mounting bracket

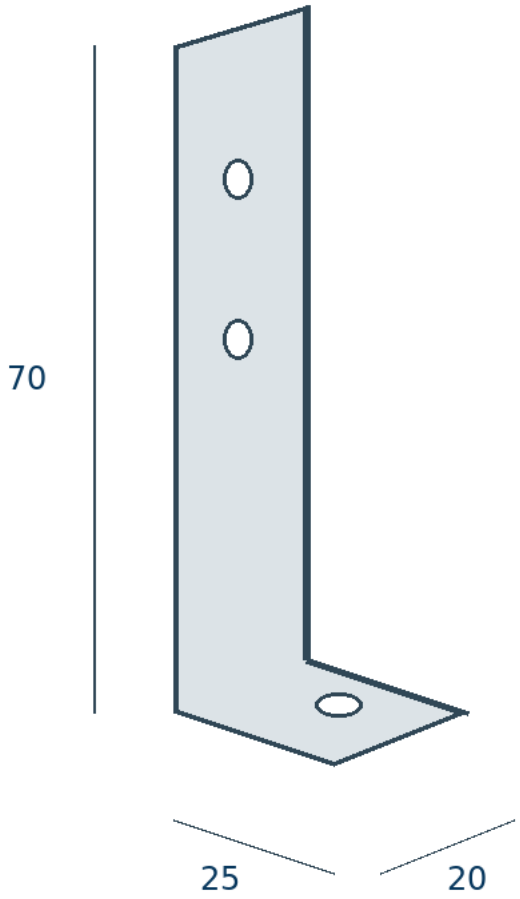

Dimensions in mm / Maten in mm

Wall mounting with the light opening facing upwards.

Wandmontage met de lichtopening naar boven.

Minimum two fixing points per profile, preferably equally spaced.

Minimaal twee bevestigingspunten per profiel, gelijkmatig verdeeld.

LEDPRO

Side mounting - installation

Montage met SM/B-beugels

SM/B - Installation / Montage

1. Remove the profile fixing screw.

Verwijder de bevestigingsschroef voor het profiel.

2. Fasten the bracket to the profile.

Bevestig de beugel aan het profiel.

3. Use at least two fixing points per profile.

Gebruik minimaal twee bevestigingspunten per profiel.

4. Mark the mounting holes on the wall.

Teken de bevestigingsgaten op de wand af.

5. Secure the brackets to the mounting surface.

Bevestig de beugels stevig aan de ondergrond.